

Garageflex Assembly Instructions

Product: Activity Rack Cover

The Garageflex Activity Rack Cover is used with the following products:

FX2000/FX2000a/FX2000b/FX2000c	Stick Rack
FX2001 and FX2001a	Tennis Rack
FX2002	Skate Rack
FX2003 and FX2003a	Lawn & Garden Rack
FX2004 and FX2004a	Double Golf Rack
FX2005 and FX2005a	Horizontal Bike Rack
FX2015 and FX2015a	Vertical Bike Rack
FX2016 and FX2016a	Handyman Rack
FX2018	Large Basket
FX2020 and FX2020a	Multi-Tool Holder
Plus	Bike Storage Starter Kit

Tools Required: Phillips Screwdriver

Step 1: Place the activity rack cover on the face of the activity rack itself and align the four screws holes on both rack and cover together.

Step 2: Fasten the four screws in place using a screwdriver

Step 3: This is now ready for installation on the wall

If you have any questions or need some advice regarding your installation, please do get in touch and we will do our best to help.



Unit 11 Westfield Farm
Medmenham
Buckinghamshire
SL7 2TA

01491 579975 | info@garageflex.co.uk
www.garageflex.co.uk